




### Dimensioni albero - Shaft dimensions - Welleabmessungen

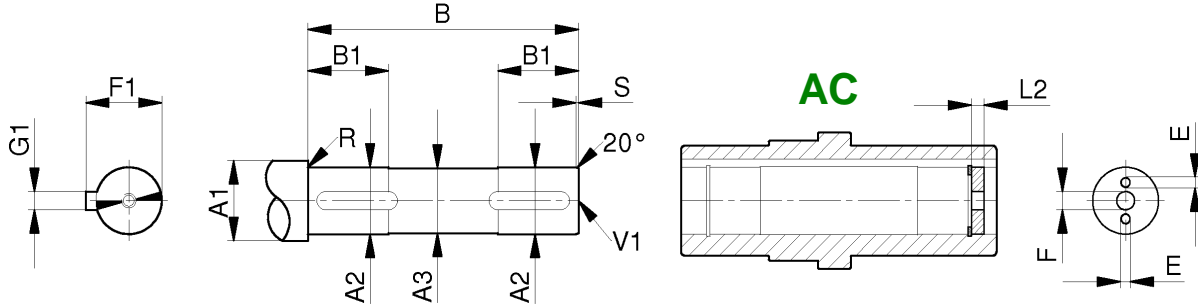

- Montaggio  
Mounting  
Montage

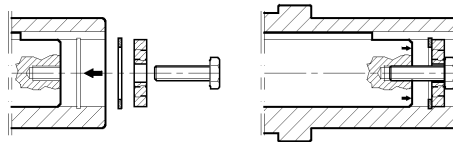

- Smontaggio  
Disassembly  
Demontage

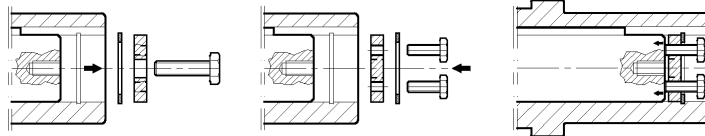


Size	A1	A2	A3	B	B1	E	F	F1	G1	L2	R	S	V1
Gr.1	40	<b>30</b>	29	98	35	M6	11	33	8	5,5	1	2	M10x22
	35	<b>25</b>	24	98	35	M6	9	28	8	5,5	1	2	M8x19
Gr.2	45	<b>35</b>	34	113,5	40	M8	11	38	10	7	1	2	M10x22
	40	<b>30</b>	29	113,5	40	M6	11	33	8	7	1	2	M10x22
Gr.3	50	<b>40</b>	39	133,5	45	M8	13	43	12	7	1	2	M12x28
	45	<b>35</b>	34	133,5	45	M8	11	38	10	7	1	2	M10x22
Gr.4	60	<b>50</b>	49	155,5	55	M10	17	53,5	14	8	1,5	3	M16x36
	55	<b>45</b>	44	155,5	55	M10	17	48,5	14	8	1,5	3	M16x36
	50	<b>40</b>	39	155,5	55	M8	13	43	12	8	1,5	3	M12x28
Gr.5	75	<b>60</b>	59	185	65	M12	17	64	18	12,5	2	4	M16x36
	70	<b>55</b>	54	185	65	M12	17	59	16	12,5	2	4	M16x36
	65	<b>50</b>	49	185	65	M10	17	53,5	14	12,5	2	4	M16x36
Gr.6	85	<b>70</b>	69	205	70	M12	21	74,5	20	12,5	2	4	M20x42
	80	<b>65</b>	64	205	70	M12	21	69	18	12,5	2	4	M20x42
	75	<b>60</b>	59	205	70	M12	21	64	18	12,5	2	4	M16x36


# R1- 6

## Getriebe - Gearboxes - Riduttori RN-RO-RV


### Welleabmessungen - Shaft dimensions - Dimensioni albero

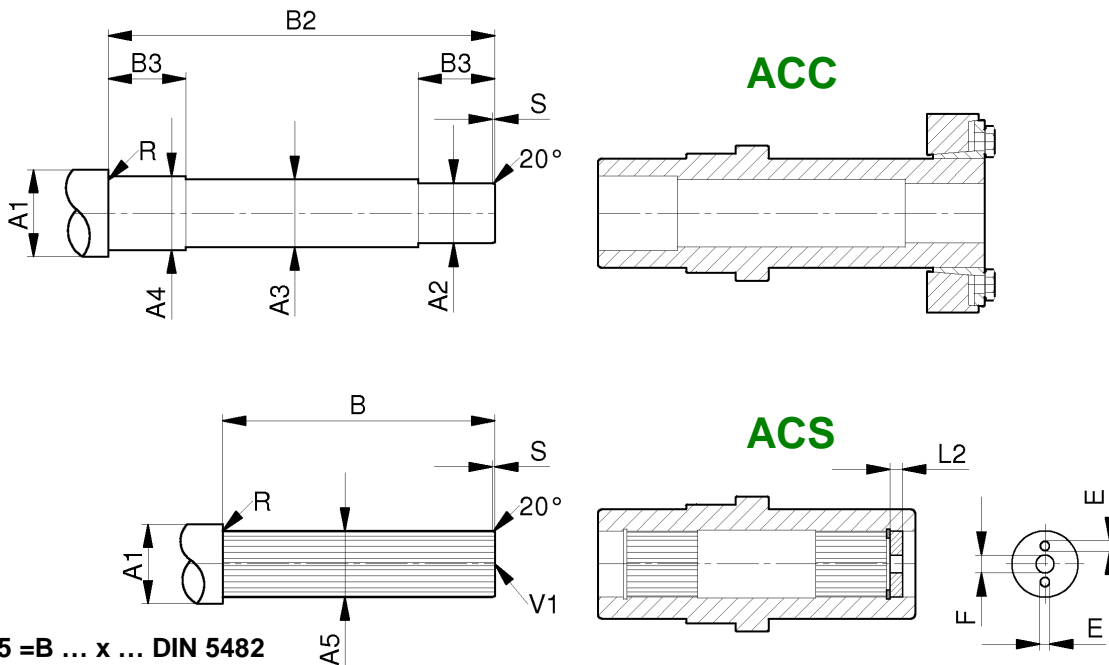

- Montaggio  
Mounting  
Montage

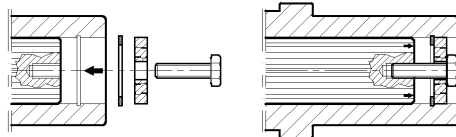

- Smontaggio  
Disassembly  
Demontage

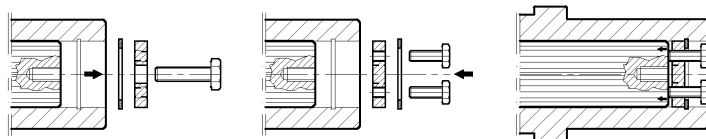

Size	A1	A2	A3	A4	A5	B	B2	B3	E	F	L2	R	S	V1
Gr.1	40	<b>30</b>	29	32	30x27	98	144	34	M6	11	5,5	1	2	M8x19
Gr.2	45	<b>35</b>	34	37	35x31	113,5	167	39	M8	11	7	1	2	M10x22
Gr.3	50	<b>40</b>	39	42	40x36	133,5	189	49	M8	13	7	1	2	M10x22
Gr.4	60	<b>50</b>	49	52	50x45	155,5	220	49	M10	17	8	1,5	3	M16x36
Gr.5	75	<b>60</b>	59	62	60x55	185	267	49	M12	17	12,5	2	4	M16x36
Gr.6	85	<b>70</b>	69	72	70x64	205	294	49	M12	21	12,5	2	4	M20x42